


LED String Lights Multi-Function Controller (Rev-B) Instructions

Rev:0803-B

LED light strings are great for tabletop decorations at weddings, Christmas parties, corporate events and other celebrations.

Battery powered party lights can be used anywhere AC power is not available. LED lights use less energy, which means longer battery life and savings on replacement batteries.

Battery Installation:

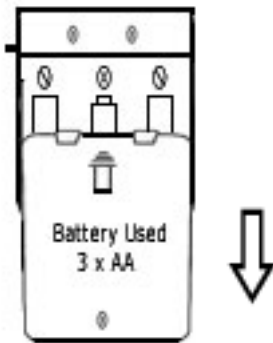

Remove the bottom screw from the battery cover. Slide the battery cover in the direction indicated by the arrow (away from the wire).

Install three 'AA' batteries using care to follow the battery placement diagram in the battery box. Rechargeable batteries are a good idea to help the environment.

To replace the battery cover: slide the battery cover until tabs are firmly seated in the cover locked position. Replace the bottom screw to secure the battery cover.

Three 'AA' batteries will power these lights for 30 to 50 hours of constant use, or many days of occasional use.


Operation:

Locate the square switch on the the right side panel of the battery box.

- Slide the switch toward the wire to turn the light string ON.
- Slide away from the wire to turn the lights OFF.

Locate the round mode switch on the face of the battery box.

- Press the mode switch to cycle through available blink patterns.

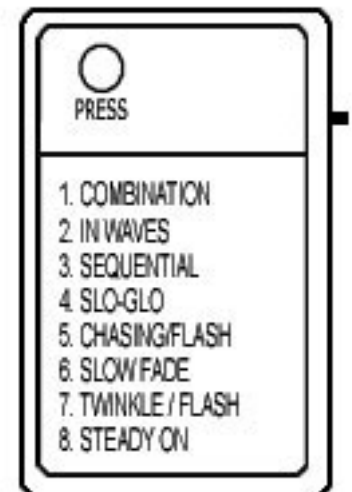

Safety Instructions:

When using battery mini lights, basic precautions should always be followed including these safety tips:

1. Battery Christmas lights are not intended for permanent installation or use.
2. Do not mount or place battery Christmas lights near gas or electric heaters, fireplaces, or other similar sources of heat.
3. Do not secure the battery mini lights with staples, nails, or place on sharp hooks.
4. Remove batteries from battery box when not in use



WARNING: - Do not mix old and new batteries. Do not mix standard (Carbon zinc), alkaline or rechargeable (nickel-cadmium) batteries. Do not place the battery operated string lights in your mouth.