


LED String Lights Single Function Controller Instructions

Rev:0102-A

Battery operated LED lights are lightweight, simple to arrange and extremely safe. LED bulbs present many advantages over incandescent light sources including lower energy consumption, longer lifetime, improved robustness, smaller size, faster switching, and greater durability and reliability.

Whether you choose to use them in a table decoration, add the finishing touch to floral arrangements or just as Christmas decorations with a twist, these battery-powered fairy lights are your perfect choice.

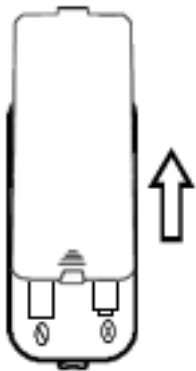

Battery Installation:

To remove the battery cover: slide the battery cover in the direction indicated by the arrow (toward the wire).

Install two 'AA' batteries using care to follow the diagram in the battery box. Rechargeable batteries are a good idea to help the environment.

To replace the battery cover: slide the battery cover until tab is firmly seated in the cover locked position.

Just two 'AA' batteries will power these lights for 30 to 50 hours of constant use, or many days of occasional use.

Changing Modes:

Locate the switch on the top front of the battery box.

- Slide the switch to the far right (toward the wire) to turn the light string OFF.
- Slide the switch to the far left (away from the wire) for CONSTANT ON mode..



Safety Instructions:

When using battery mini lights, basic precautions should always be followed including these safety tips:

1. Battery Christmas lights are not intended for permanent installation or use.
2. Do not mount or place battery Christmas lights near gas or electric heaters, fireplaces, or other similar sources of heat.
3. Do not secure the battery mini lights with staples, nails, or place on sharp hooks.
4. Remove batteries from battery box when not in use



WARNING: - Do not mix old and new batteries. Do not mix standard (Carbon zinc), alkaline or rechargeable (nickel-cadmium) batteries. Do not place the battery operated string lights in your mouth.